


# SHAD

## HONDA CB 500 X '16 KIT TOP HOCX56ST

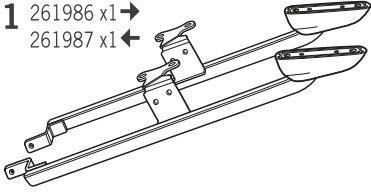

1 261986 x1 →  
261987 x1 ←



2 260417 x2  
Ø16 Ø9 x 16



3 303020 x 2  
Ø8



4 304036 x2  
M8 x 45 Din 7380



5 260648 x2  
Ø16 Ø9 x 5



6 304081 x4  
M8 x 20 Din 7380



7 303018 x4  
Ø8

### ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

