



SHAD

BENELLI TRK 502 X '20 KIT TOP BOTX50ST

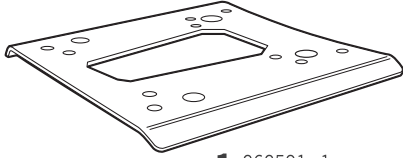

1 262591 x1



2 304221 x2
M6 x 45 Din 7380




3 303017 x6
Ø6



4 260731 x4
Ø16 Ø11 x 10



5 302021 x4
M6




6 304330 x2
M8 x 110 Din 7991



7 303025 x2
Ø10



8 261121 x2
Ø20 Ø11 x 18



9 304093 x2
M6 x 40 Din 7991

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

